



## Clean Remote® CR1 & CR2BB Instructions TV Only Universal Remote Control

### Battery Installation:

1. To open cover: **With keypad facing you**, first slide dark lens cover away from you (photo A, step 1) and then lift lid upward from the back (photo A, step 2)
2. When placing **two AAA batteries** in the compartment note the + and - symbols on the metal hinge should make contact with the corresponding + and - end of each battery (photo B).
3. Closing cover: **With keypad facing away from you** gently close cover by pressing downward (photo C, step 1) and sliding it toward the front (keypad) until it is aligned. (photo C, step 2)
4. Test remote by pressing the power button; the LED should light, indicating that the batteries are in correctly. If the LED doesn't light, then the batteries are either in wrong or the batteries are bad.

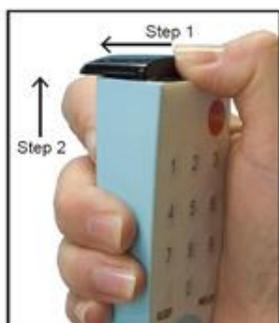


Photo A

Open with keypad facing you



Photo B



Photo C

Close with keypad facing away from you

Optional screw for the battery compartment is in bag with remote

**No Setup required for ANY Samsung or LG TV. Also works RCA (commercial TVs) with no setup.**

**FOR ALL OTHER BRANDS SEE EASY ONE STEP SETUP INSTRUCTIONS BELOW**

**Start with the TV powered ON and stand back about 5 feet from the TV**

- A. Point the remote at the center of the TV screen, then Press and firmly hold down the Setup button, (do not release). The LED will blink once and then after 7 seconds the code search will begin. The LED will continue to blink every 2 seconds. As soon as your TV shuts off, immediately release the Setup button; the code will automatically lock in.**

Test the remote. If everything works, you are done. If the main functions are not working properly, you may not have an exact code match. Start again at Step A. The code search will continue where it left off.

**Important Note: If you think that you missed the code you can reset the remote back to the beginning of the code search;** Press and hold both the SETUP and CC buttons down at the same time until the red LED light blinks quickly 3 times, then release both buttons. The remote is now reset to the factory default which will operate any LG or Samsung TVs as well as RCA (commercial TVs). For other brands follow the Setup instructions above (Step A.)