



Clean Remote® CR4 and CR4-B Instructions

This unit is preset to operate all Samsung, LG and RCA* TVs

No programming required; simply add batteries

(*RCA Healthcare and Hospitality TVs)

Battery Installation:

1. To open cover: With keypad facing you, first slide dark lens cover away from you (photo A, step 1) and then lift lid upward from the back (photo A, step 2)
2. When placing **two AAA batteries** in the compartment note the + and - symbols on the metal hinge should make contact with the corresponding + and - end of each battery (photo B).
3. Closing cover: **With keypad facing away from you** gently close cover by pressing downward (photo C, step 1) and sliding it toward the front (keypad) until it is aligned. (photo C, step 2)
4. Test remote by pressing the power button; the LED should light indicating that the batteries are in correctly. If the LED doesn't light, then the batteries are either in wrong or the batteries are bad.



Photo A
Open with keypad facing you



Photo B



Photo C
Close with keypad facing away from you

Optional screw for the battery compartment is in plastic bag

Once your batteries are installed your Clean Remote® is now ready to use with all Samsung, LG and RCA* TVs

(*RCA Healthcare and Hospitality TVs)

Important: This TV remote is only compatible with Samsung, LG and the *RCA Commercial TVs

(*RCA Healthcare and Hospitality TVs)