

CLEAN REMOTE FOR MULTI-BED TV INSTRUCTIONS

FOR HEALTHCARE TVs WITH THIS FUNCTION ONLY

CR3BCB-H

Battery Installation:

1. To open cover: With keypad facing you, first slide dark lens cover away from you (photo A, step 1) and then lift lid upward from the back (photo A, step 2)
2. When placing **two AAA batteries** in the compartment note the + and - symbols on the metal hinge should make contact with the corresponding + and - end of each battery (photo B).
3. Closing cover: **With keypad facing away from you** gently close cover by pressing downward (photo C, step 1) and sliding it toward the front (keypad) until it is aligned. (photo C, step 2)
4. Test remote by pressing the power button; the LED should light, indicating that the batteries are in correctly. If the LED doesn't light, then the batteries are either in wrong or the batteries are bad.



Photo A
Open with **keypad facing you**



Photo B



Photo C
Close with **keypad facing away from you**

Optional screw for
the battery
compartment is in
bag with remote

IMPORTANT

Before proceeding, please insure that your TV has the Multi (bed)-Code feature and the TV has been set to the appropriate Multi (bed)-Code setting. You will need to refer to your TV's manual for TV Multi (bed)-Code setup instructions.

- 1) Press and Hold the SETUP button on the remote for approximately two seconds then also Press and Hold the ENTER button. Once a solid red light appears on the remote release both buttons.
- 2) Enter the corresponding 3 digit Multi-bed code from the list below.

Test the remote to insure proper operation; If everything is working you are done, if not please insure your TV is also set to the correct Multi-Bed code and repeat Step 2 above.

CLEAN REMOTE FOR MULTI-BED TV INSTRUCTIONS

FOR HEALTHCARE TVs WITH THIS FUNCTION ONLY

CR3BCB-H

MULTI-BED TV CODES

SAMSUNG®

Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.

Stand Alone TV (0) No Multi-Code	241
ID Code 1 (TV 1)	260
ID Code 2 (TV 2)	261
ID Code 3 (TV 3)	262
ID Code 4 (TV 4)	263
ID Code 5 (TV 5)	264
ID Code 6 (TV 1)	265
ID Code 7 (TV 1)	266
ID Code 8 (TV 8)	267
ID Code 9 (TV 9)	268

PDI®

Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.

038 or 042	040 or 044
------------	------------

PHILIPS®

Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.

Blue Stand Alone TV No Multi-Code	215 or 505
Red	269 or 502
Green	270 or 503
Yellow	271 or 504

RCA®

Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.

Stand Alone TV System/Bed 1	216 or 280 or 296
System/Bed 2	299 or 281 or 297
System/Bed 3	501 or 298 Not All Sets
System/Bed 4	Not Available

LG®

Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.

Stand Alone TV No Multi-Code	274
Multi-Code 1 (Bed 1)	275
Multi-Code 2 (Bed 2)	276
Multi-Code 3 (Bed 3)	277
Multi-Code 4 (Bed 4)	278

ZENITH® (Older CRT TVs)

Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.

Bed 2 or Stand Alone TV	272
Bed 1	2732

RESET: To reset remote back to original manufacturer settings, or reset the remote to operate a standard TV: Press hold both the Setup and the CC button down at the same time until the red LED light blinks quickly 3 times, then release both buttons. Then follow the Easy Setup instructions below.

EASY STANDARD TV SETUP (No Multi-Bed)

1. Turn on the TV and then **stand back about 5 feet from TV and Point the remote at the CENTER of the front panel of the TV.** It will not be necessary to point the remote at that exact area once the remote is set-up.
2. **Press and firmly Hold** down the **Setup** button, do not release. The LED will blink once and then after 7 seconds it will start code search. The LED will continue to blink every 2 seconds. Once your TV shuts off immediately remove your finger from the Setup button; the code automatically locks in.
3. Testing the remote:
For TV Only: Test Power, Volume and Channel Functions, **if all work correctly setup is complete.** If not, you may not have an exact code match. Start again at step #1. The code search will continue where it left off.

Important Note: If you think you missed the code or you intend to use the remote on a different brand TV: See RESET instructions above.