

Battery Installation

1



Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).

2



Install 2 AAA batteries. Make sure the + and - symbols on the metal hinge of the battery compartment correspond with the + and - end of each battery.

3



With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).

4

Test the remote by pressing the power button. The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

Important: ®
The optional screw for the battery compartment is taped to the (blue) box's lid.

www.cleanremote.com

This Remote is not for Standard TVs, Cable Boxes, ROKU or FIRE TV