


INSTRUCTIONS SCR10+ and SCR10NN


Smart TV Remote Control
For Hospitality TVs, and many
Hospitality GRE, Streaming or Casting Systems

Battery Installation

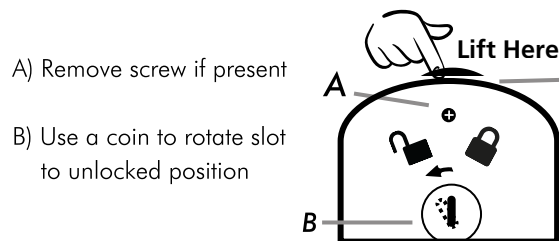

C) Use your finger tip to lift up battery cover

D) Install 2 AA batteries (must be new).
Watch for polarity

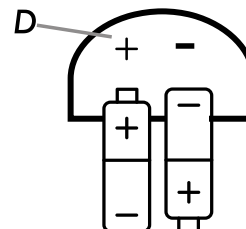

Ensure the batteries are installed correctly. A light to the left of the power button will flash any time a button is pressed. If it does not, reinstall the batteries correctly or check the condition of the batteries.

Note: The optional screw for the battery compartment is not required, but will help reduce battery loss. (Screw is taped inside blue box)

✓ The Remote is now ready to operate any LG, Samsung, RCA or Philips Commercial TV

Important If you are offering streaming services, such as NETFLIX or YouTube you will need to Enter a code.

Code Entry

To select your system, PRESS and HOLD both  and  until the light to the left of the POWER button lights up solid, then enter the corresponding three digit code. The light on the remote turns off to confirm the code is stored. If the light flashes repeatedly repeat the process above to add the code.

Commercial GRE, Streaming or Casting

Enseo	004 or 006
World Cinema / WorldVue.....	005
Bonvoy	006
GuestTek.....	007 or 008
Sonifi	010, 011, 012 or 014
LG ProCentric Direct NETFLIX.....	038
Philips MediaSuite NETFLIX.....	003
Samsung LYNK Cloud NETFLIX.....	041
INFO KEY = Hotel Key.....	042
HOME KEY = Hotel Key.....	043
LG STB 6500.....	038 or 001
TCL.....	050

DIRECTV AEP1 (only)

LG and Samsung	013
Element	023
Insignia	022
Hisense	013
Magnavox	025
ONN	015
Philips	025
RCA	013, 015 or 016
Sceptre	017 or 018
Sony	019
TCL	020
Toshiba	021
Vizio	013
Westinghouse.....	019, 023 or 024

DIRECTV AEP2 (only)

AEP2 Default	044
LG	046
Samsung	047
Philips	048
Element	074
Insignia	073
Hisense.....	046 or 077
Magnavox	048
NEC	078
ONN.....	049
RCA.....	046, 049 or 067
Sceptre.....	068
Sony	070
TCL	071
Toshiba	072
Vizio.....	077
Westinghouse..	070, 074, 075, or 076

DISH EVOLVE 1 (only)

MPI/MTI Cable Protocol	026
LG, Samsung and RCA.....	027
Element	036
Insignia	035
Hisense	027
Magnavox	037
ONN	028
Philips	037
RCA	027, 028 or 029
Sceptre	030 or 031
Sony	032
TCL	033
Toshiba	034
Vizio	027
Westinghouse	032 or 036

If all of your system's functions are not working properly, please try the next code for your system (if available).

More codes and instructions on next page

LG Multi-Code / Multi-Bed TV or STB Systems

LG Multi-Code 1 (Bed 1)051	LG Multi-Code 9 (Bed 9)059
LG Multi-Code 2 (Bed 2)052	LG Multi-Code 10 (Bed 10)060
LG Multi-Code 3 (Bed 3)053	LG Multi-Code 11 (Bed 11)061
LG Multi-Code 4 (Bed 4)054	LG Multi-Code 12 (Bed 12)062
LG Multi-Code 5 (Bed 5)055	LG Multi-Code 13 (Bed 13)063
LG Multi-Code 6 (Bed 6)056	LG Multi-Code 14 (Bed 14)064
LG Multi-Code 7 (Bed 7)057	LG Multi-Code 15 (Bed 15)065
LG Multi-Code 8 (Bed 8)058	LG Multi-Code 16 (Bed 16)066

(Important Feature Must Be Supported by the TV or STB)

Learning Function

You can use this feature to REPLACE the function of any button on the Clean Remote SCR10.

The learning feature allows you to add or teach a command from your original remote to your Clean Remote SCR10.

- 1) On the Clean Remote SCR10 PRESS and HOLD both the  and  until the light to the left of the POWER button lights up solid.
- 2) Point both remotes at each other  and select the Clean Remote SCR10 button you wish to teach the new function to by PRESSING it one time.
- 3) PRESS the button on the original remote you want the Clean Remote SCR10 to learn, one time. The light to the left of the POWER button on the Clean Remote SCR10 will flash to confirm the process is complete. Simply repeat these steps to learn other button commands.

Factory Reset

To restore the Clean Remote SCR10 to its original factory settings. PRESS and HOLD both the  and  until the light to the left of the POWER button flashes 3 times.

The remote is now reset and will operate LG, Samsung, *RCA, and *Philips TVs.

This remote is not for Cable Set–Top boxes, ROKU TV, ROKU Devices (Sticks), Fire TV or Fire TV Devices (Sticks)

www.cleanremote.com